



Instrukcja obsługi DIGISENIOR CE

Uniwersalny pilot zdalnego sterowania z funkcją uczenia

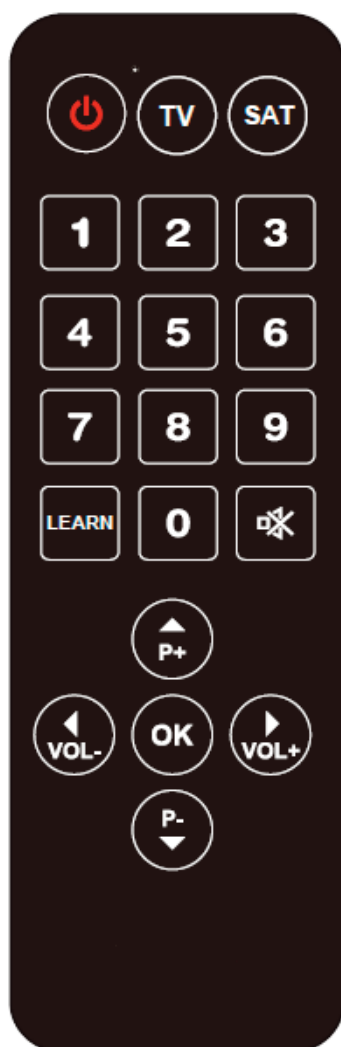

Uwagi dotyczące recyklingu

Opakowanie tego pilota jest w całości wykonane z materiałów nadających się do ponownego przetworzenia. Prosimy o ich posortowanie i wrzucenie do odpowiednich pojemników na odpady recyklingowe. Po zakończeniu użytkowania tego odbiornika nie można wyrzucać go razem z normalnymi odpadami komunalnymi. Należy go oddać do utylizacji do specjalnego punktu zbiórki zużytych urządzeń elektrycznych i elektronicznych. W lokalnym urzędzie gminy uzyskają Państwo informacje o najbliższych punktach utylizacji odpadów.

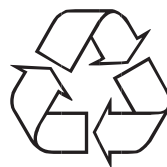

1. Wprowadzenie

Zawartość zestawu

- pilot zdalnego sterowania z funkcją nauki
- instrukcja obsługi

2. Funkcje urządzenia

2.1 Funkcja nauczania pilota

W celu skopiowania komend z pilota źródłowego do pilota DigiSenior CE pilot źródłowy musi działać.

1. Proszę wcisnąć i przytrzymać przez ok. 4 sekundy przycisk LEARN na pilocie DigiSenior CE do momentu aż dioda LED zacznie migać.
2. Proszę umieścić pilota DigiSenior CE przed pilotem z którego chcemy skopiować funkcje klawiszy.
UWAGA: odległość od diody IR powinna wynosić ok. 2 cm.
3. Proszę wcisnąć przycisk, który ma być zaprogramowany na pilocie DigiSenior CE.
4. Następnie proszę wcisnąć przycisk, który ma być skopiowany do DigiSenior CE.
 - Jeśli dioda LED zamiga dwa razy a potem będzie migać szybko oznacza to, że operacja kopiowania się powiodła.
 - W przypadku gdy LED zamiga trzykrotnie i pozostanie zaświecona oznacza to, że operacja kopiowania się nie powiodła.
5. W celu zaprogramowania pozostałych 6 przycisków proszę powtórzyć procedurę od punktu 3.
6. Proszę wcisnąć przycisk LEARN w celu zapisania zmian i opuszczenia trybu nauczania.

Wskazówka: Jeśli nie wciśnięcie Państwo żadnego przycisku przez okres 5 sekund to pilot wyłączy tryb nauki i dioda LED zgaśnie.

Uwaga: Jeśli wpisze Państwo uniwersalny kod to należy mieć na uwadze fakt, że przyciski, które zostały zaprogramowane poprzez funkcję nauczania stracą swą funkcję.

Pilot może działać w trybie TV i SAT. Każdy z tych trybów można oddzielnie zaprogramować poprzez funkcję nauczania.

UWAGA: przycisk  można zaprogramować jako: wyciszenie lub np. telegazeta.

2.2 Funkcja wpisania kodów uniwersalnych

1. Włącz urządzenie.
2. Sprawdź model oraz firmę urządzenia i wyszukaj kod w liście z kodami.
3. Proszę wcisnąć przycisk TV lub SAT na okres około 5 sekund do momentu aż zapali się na stałe dioda LED.
4. Jeśli dioda świeci się światłem ciągłym proszę wpisać kod urządzenia (dostępny na liście).

Jeśli dioda zgaśnie oznacza to, że kod został zaakceptowany (Jeśli dioda zamiga trzy razy oznacza to, że kod nie został przyjęty i należy wrócić do punktu nr. 3).

Po zaprogramowaniu proszę wcisnąć przycisk power na pilocie DigiSenior CE, jeśli urządzenie zostanie włączone oznacza to, że zostało poprawnie zaprogramowane. W przypadku gdy urządzenie nie odpowiada to należy wrócić do punktu nr.2 i wpisać inny kod.

Uwaga: Jeśli podczas programowanie w ciągu 15 sekund nie zostanie wciśnięty przycisk pilota, urządzenie opuści tryb programowania.

2.3 Funkcja przypomnienia kodu zapisanego w pilocie

W przypadku gdy zapomnicie Państwo kodu, który został zapisany w pilocie proszę użyć funkcji przypomnienia. Funkcja pozwala wyświetlić informacje dotyczącą 4 cyfrowego kodu.

1. Proszę wcisnąć i przytrzymać przycisk TV lub SAT (w zależności, który tryb został zaprogramowany) i następnie proszę wcisnąć OK i zwolnić przycisk TV/SAT wraz OK.
2. Ilość mrugnięć diody LED pomiędzy pauzami wskazuje wartość kodu.

Np. kod 1380

- 1 mrugnięcie, następnie pauza ok. 1 sek. - 1
- 3 mrugnięcia, następnie pauza ok. 1 sek. - 3
- 8 mrugnięć, następnie pauza ok. 1 sek. - 8
- 10 mrugnięć, następnie pauza ok. 1 sek. - 0

3. Uwagi

W celu zachowania w pamięci zapisanych kodów proszę podczas wymiany baterii nie wciskać żadnych przycisków na pilocie DigiSenior CE.

4. Kontakt

Zgłoszenia serwisowe TechniSat
tel.: 071 310 40 41 1)
e-mail: serwis@technisat.com
Biuro Obsługi Klienta
tel.: 071 310 41 41 1)
e-mail: biuro@technisat.pl

1) Czynne od poniedziałku do piątku w godzinach: 8:00-16:00




DigiSenior CE posiada znak CE i spełnia wymagane przez UE normy.
TechniSat zastrzega sobie prawo do zmian i błędów w druku. Stan 10/2015
TechniSat i DigiSenior CE są zarejestrowanymi znakami towarowymi TechniSat Digital GmbH

Disposal of the appliance and standards

Old appliances are not worthless rubbish. By recycling valuable raw materials can be recovered. Check with your municipal or local government options for environmentally - friendly disposal of the device. This product may not, at the end of his life be disposed via the normal household waste, but should be taken to a collection point for recycling of electrical and electronic equipment.

The symbol on the product, user manual or packaging indicates the recycling of the product. The materials are recyclable according to their labeling. With the reuse, recycling or other forms of utilizing old devices, you are making an important contribution to protecting our environment.

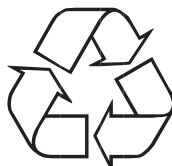

1. Introduction

Scope of delivery

- remote controller with learn function
- user manual

2. Device features

2.1 Learn function for TV keys

To copy the codes from the original remote control, the TV remote must be working.

1. Press and hold LEARN button for about 4 seconds until the LED begins
2. Place DigiSenior CE in front of the remote control that you want to copy at a distance of about 2 cm.
3. Press on DigiSenior CE the button you want to copy (e.g ON/OFF button DigiSenior CE), the LED stays lit.
 - If the LED on the remote control DigiSenior CE emits a double blink and then to flash rapidly the code has been copied successfully.
 - If the LED on the remote control DigiSenior CE emits a triple flash and then CODE REMINDER
4. Press and hold the button on the original remote that you want to copy (e.g ON/OFF button - TechniSat STB). remain lit the code was not copied.
5. Repeat the procedure from step 3 to copy the other 6 buttons available.

If you do not press any key for about 5 seconds the remote will exit from learning function and the LED turns off.

CAUTION: If you enter a new universal code or made a new auto-search on DigiSenior CE the learned keys on the TV part will be. deleted and you will have to repeat the copy procedure.

2.2 Direct code entry function

1. Turn on the device.
2. Look for the brand of the device you want to program in the code list and a note of the first code in the list.
3. Press and hold the device [DTT/SAT] key of URC around 5 seconds until LED goes on. Then release.
4. When the LED goes on in step 3, enter the previously identified code from the code list.
If LED turns off, it indicates that the code is accepted. (If LED flashes 3 times and then turned off, it indicates the code is unaccepted. Repeat from Step 3). Then press [POWER] of DigiSenior CE to see if it can turn off the device. If it can turn off the appliance, it means the code is correct; if not, please repeat from step 2 to try another codes.

The remote control exits programming mode and the LED stops flashing if no keys are pressed for 15 seconds.

2.3 Code reminder function

In case you forget the codes entered in the DigiSenior CE, please follow these steps to find out the 4 digits codes .

1. Press and hold [DTT/SAT] key then press OK, release both of them, led will flash once.
2. Led will indicate the digit code with a series of flashes separated by a brief pause.

Ex code 1380:

- 1 flash followed by a pause of 1 sec. = 1
- 3 flashes followed by a pause of 1 sec. = 3
- 8 flashes followed by a pause of 1 sec. = 8
- 10 flashes followed by a pause of 1 sec. = 0

3. Please take note of the 4 digits code in order to re-insert in case of loss of memory during batteries replacement.

3. Remarks

If you enter a new universal code or made a new auto-search on DigiSenior CE the learned keys on the TV part will be. deleted and you will have to repeat the copy procedure.

4. Service

In case of a failure, please contact with your local distributor of TechniSat products.



Your unit carries the CE mark and complies with all relevant EU standards.
Subject to change for amendments and printing errors Version 10/2015
TechniSat and DigiSenior CE are registered trademarks of TechniSat Digital GmbH